

BUTTON DESCRIPTION FOR LIVE VIEW VIDEO

BUTTON	DESCRIPTION
START	Manage/ Activate PTZ Tour
STOP	Deactivate PTZ Tour
LEARN	Select camera (move left)
DETECT	Select camera (move right)
INFO	Open Archive
1-9	Number of preset
0	Home
F1	Select saved screen
F2	Maximise selected camera
F4	Save current frame
JOG SHUTTLE	Select camera
JOYSTICK	PTZ control

BUTTON DESCRIPTION FOR ARCHIVE

BUTTON	DESCRIPTION
ESC	Close archive
START	Play archive video
STOP	Stop archive video
PAUSE	Pause archive video
LEARN	Seek backward
DETECT	Seek forward
SET (1..9)	Save current time
1-9	Shortcut to saved time
JOG SHUTTLE	Move to next frame/ Playback speed